

# Classic Instruments

***1967 – 1968***

***Camacho***

Installation Manual

## Contents

|   |    |
|---|----|
| Welcome from the Team at Classic Instruments! ..... | 3  |
| Remove Original Instrument Panel.....               | 4  |
| New Instrument Panel Wiring .....                   | 5  |
| 16 Pulse Signal Generator [SN16] Wiring .....       | 6  |
| Oil Pressure Sender Installation.....               | 7  |
| Temperature Sender Installation.....                | 8  |
| Instrument Panel Wiring Diagram .....               | 9  |
| Speedometer / Tachometer Calibration.....           | 10 |
| Entering Calibration Mode: .....                    | 10 |
| Tachometer Cylinder Setup: .....                    | 10 |
| Tachometer Signal Type Setup:.....                  | 11 |
| Speedometer “Instant” Calibration: .....            | 11 |
| Speedometer “Real-Time” Calibration:.....           | 12 |
| Speedometer “Measured Mile” Calibration:.....       | 12 |
| Optional Shift Indicator Setup: .....               | 13 |
| Reset Gauge Calibration to Factory Defaults: .....  | 13 |

## **Welcome from the Team at Classic Instruments!**

Our congratulations and appreciation for your purchase of one of the finest quality sets of specialty instruments ever produced! Your instrument set has been conceived, designed, and manufactured by Classic Instruments, Inc. in the U.S.A. Each instrument has been tested and certified for accuracy and quality before packaging and shipping.

For trouble-free installation and operation follow the instructions exactly as outlined. Your instruments were assembled to precise specifications and although each has a five (5) year warranty covering defective parts and workmanship – this warranty will not cover instruments or sender units which have been installed incorrectly.

Follow our recommended procedures for installation and proper hookup to maintain the value and appearance of your instrument set during many future years of accurate and dependable service!

### **LIMITED WARRANTY**

Classic Instruments, Inc. (CI) warrants to the original purchaser that any CI product manufactured or supplied by CI will be free from defects in material and workmanship under normal use and service for a period of five (5) years from date of purchase.

Improper installation, use of sending units other than CI's or attempted repair or adjustments by other than CI shall void this warranty. Disassembly of any instruments or senders for whatever reason shall specifically void this warranty.

It's always easy to look to a part for an issue with your set. Before you conclude that a part may be bad, thoroughly check your work. Today's semiconductors and passive components have reached incredibly high reliability levels, but there is still room for error in our human construction skills. However, on rare occasions a sour part can slip through. Please be aware that testing can usually determine if the part was truly defective or damaged by assembly or usage. Don't be afraid of telling us that you "blew it", we're all human and in most cases, replacement parts are very reasonably priced.

Purchaser requesting a product to be repaired or replaced under warranty must first call CI at 1-800-575-0461 before the return of defective part. Send defective part either to 826 Moll Drive, through UPS, or to P.O. Box 411 through U.S. Mail, Boyne City, MI 49712, USA. Include a written description of the failure with defective part.

Purchaser agrees and accepts that under no circumstances will a warranty replacement be furnished until CI has first received, inspected, and tested the returned part.

All other warranties expressed or implied are hereby excluded including any implied warranty of merchandise and implied warranty of fitness for a particular purpose. The sole and exclusive remedy for breach of this warranty is limited to the replacement set forth above.

It is expressly agreed that there shall be no further remedy for consequential or other type of damage, including any claim for loss of profit, engine damage or injury.

### **TECHNICAL ASSISTANCE**

**1-800-575-0461**

**OR**

**Visit our website for the latest in gauge design and updates to our installation manual**

**[www.classicinstruments.com](http://www.classicinstruments.com)**

## Remove Original Instrument Panel

- 1) Disconnect the vehicle battery.
- 2) Remove the seven screws holding the instrument panel to the dash. *(Three screws are located at the top and four are located at the bottom.)* Save these screws to use when installing the new instrument panel.
- 3) Unplug the original instrument panel wire harness.
- 4) Remove the two screws holding the high beam indicator light assembly and remove the assembly from the original instrument panel. Save the high beam assembly and screws to install on the new instrument panel.
- 5) Remove the original instrument panel from the dash.

See Figure 1

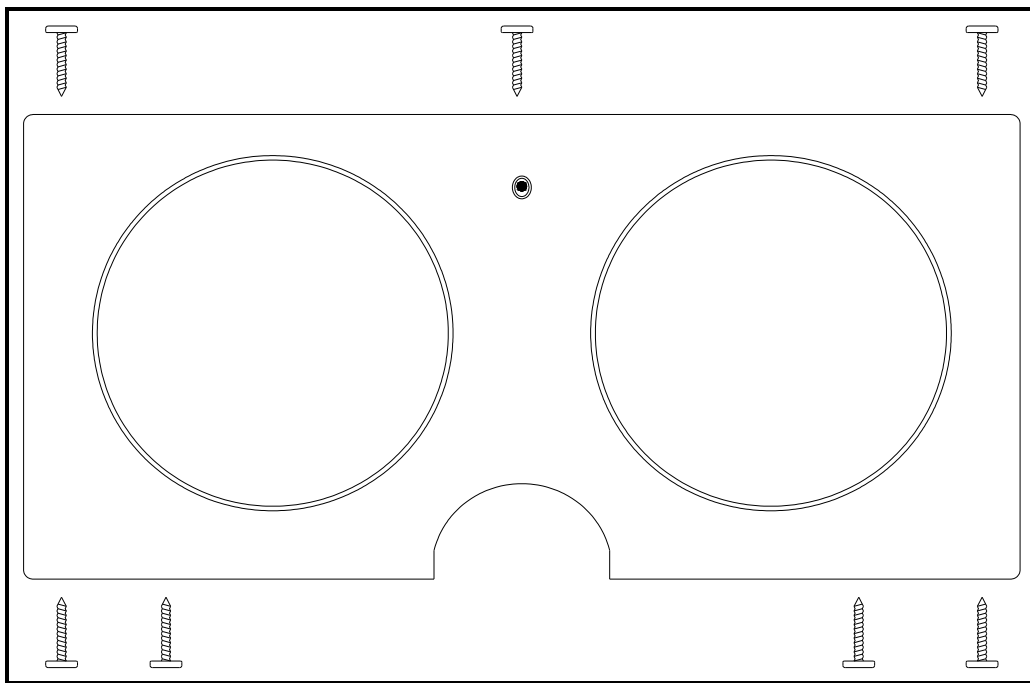


Figure 1: Instrument Panel Dash Mounting Screw Locations

## New Instrument Panel Wiring

*Always disconnect the vehicle battery before wiring any gauge.*

- 1) Connect a good chassis ground to the **Black** [position 1] wire of the gauge harness. *We recommend using a dedicated chassis ground (not stacked with other ground wires) to avoid possible problems caused by a bad ground.*
- 2) Connect dash light power to the **Gray** [position 2] wire of the gauge harness.
- 3) Connect a switched +12VDC power source to the **Pink** [position 3] wire of the gauge harness. *We recommend using a dedicated power source (i.e. separate gauge power fuse) to avoid possible problems caused by bad “noisy” power.*
- 4) Connect right turn indicator power to the **Blue/White** [position 4] wire of the gauge harness.
- 5) Optional (if special ordered high beam indicator has been installed in the gauge):
  - a. Connect high beam indicator power to the **Light Green** [position 5] wire of the gauge harness.
  - 6) Connect left turn indicator power to the **Light Blue** [position 6] wire of the gauge harness.
  - 7) Connect the fuel signal (from a 0-90 ohm OEM sender) to the **Tan** [position 7] wire of the gauge harness.
  - 8) Connect the oil pressure signal to the **Blue** [position 8] wire of the gauge harness.
  - 9) Connect the temperature signal to the **Dark Green** [position 9] wire of the gauge harness.
  - 10) Connect a tachometer signal to the **White** [position 10] wire of the gauge harness: *(see below)*

### **a. STANDARD POINTS & CONDENSER SYSTEM**

Connect the negative side of the coil (usually marked as “-”) to the tachometer signal wire.

### **b. GMC – HEI (High Energy Ignition System)**

Connect the “TACH” terminal on the coil side of the distributor cap to the tachometer signal wire.

### **c. MSD (Multiple Spark Discharge System)**

Connect the TACH signal on the MSD box to the tachometer signal wire. If the tachometer does not respond, your MSD system may require a MSD Tach adapter. Part No. 8910 or 8920.

### **d. VERTEX MAGNETO SYSTEM**

Connect the “KILL” terminal on the side of a Vertex magneto body to the tachometer signal wire. An external adapter such as an MSD “Pro Mag Tach Converter” #8132 may be required.

### **e. ACCEL IGNITION COILS**

Connect the negative side of the coil to the tachometer signal wire. CAUTION! Some Accel ignition coils require the tach signal wire to be connected to the “+” terminal on the coil! PLEASE carefully read Accel’s instructions before connecting ignition coil.

### **f. MALLORY IGNITION**

Connect the negative terminal side of coil (usually marked as “-”) to the tachometer signal wire.

### **g. ECM TACHOMETER SIGNAL**

Signal comes from the computer. When using this type of signal, the tachometer should be set for a 4-cylinder signal.

### **h. MULTIPLE COIL IGNITION SYSTEMS**


A tach adapter may be required for these ignition systems. A tach signal driver such as the MSD #8913, which produces a 12V square wave signal, is recommended. Please check with manufacturer for your specific application.

**NOTICE!** For all other ignition systems, please refer to the owner’s manual for that system.

- 11) Connect the Red wire of a Classic Instruments SN16 pulse signal generator (*if used*) to the **Red** [position 11] wire of the gauge harness.
- 12) Connect a speed signal to the **Purple** [position 12] wire of the gauge harness: (see below)
  - a. **White** signal wire from a Classic Instruments SN16 pulse signal generator.
    - i. **Black** wire from the SN16 connects to ground.
  - b. Computer speed signal (*usually a Green wire on GM harnesses*).
  - c. One wire from a stock transmission vehicle speed sensor (VSS).
    - i. The other wire from the VSS connects to the same point where the gauge harness is grounded.
- 13) Connect either wire of the included calibration pushbutton to the **Brown** [position 1] wire of the 2-wire pushbutton harness.
  - a. Connect the other wire of the included calibration pushbutton to the **Black** [position 2] wire of the 2-wire pushbutton harness.

## 16 Pulse Signal Generator [SN16] Wiring

Attach the signal generator to the transmission speedometer gear housing (where the speedometer cable originally connected). Do not use excessive force to tighten. These signal generators produce approximately 16,000 pulses per mile (PPM).

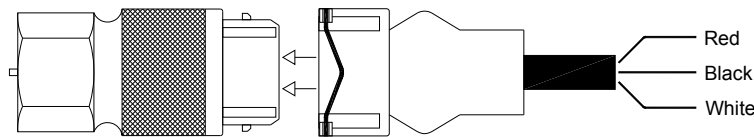


**Red:** ----- +12VDC  
**Black:** ----- Ground  
**White:** ----- Signal

## Oil Pressure Sender Installation

(Part No. SN52)

- 1) Disconnect battery before installation.
- 2) Only install Classic Instruments sending units when the engine is COLD.
- 3) DO NOT use Teflon tape on the threads. These threads are slightly tapered and designed to be self-sealing. The sender uses the threads for its ground connection and sealant may cause a poor ground causing inaccurate readings. If supplemental sealant is needed, we recommend using Loctite C5-A anti-seize. This is a copper based anti-seize which will allow a good electrical connection for the sender ground.

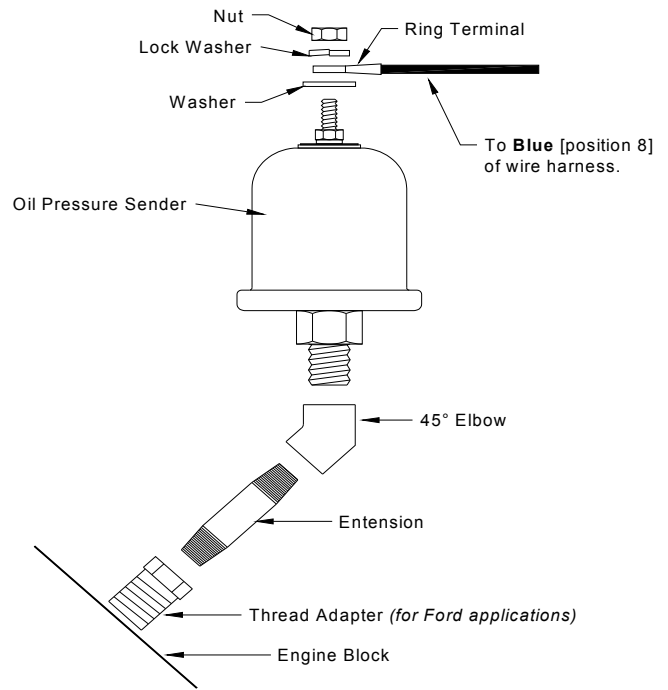

**GM Installation:** The correct location on most GM V8-engines to install the oil pressure sender is under the distributor housing at the rear of the block.

Use the 2 piece bushing kit provided to allow the sender to be mounted at a 45-degree angle pointing towards the driver's knees. This allows the sender to clear the back of the intake manifold, the underside of the distributor housing and also the firewall.

**GM Installation – Big Block Engines:** We do NOT recommend installing Classic Instrument's oil pressure sender in the opening located just above the oil filter on some big block GM engines. This location may not be a full-pressure passage but instead a "by-pass" oil passageway. Installing our pressure sender at this location may result in some strange low-pressure readings under certain driving conditions. This does not indicate a defective instrument or sender! It simply means you need to move the sender to the correct location.

**GM Installation – LS Engines:** Install the sender in the oil bypass housing located just above the oil filter. The housing will need to be drilled and tapped to 1/8"NPT.




LS1 Oil Bypass Housing

## Temperature Sender Installation

(Part No. SN22, SN23, SN24 & SN25)


- 1) Disconnect battery before making any connections.
- 2) Install the Classic Instrument's temperature sending unit only when the engine is COLD!
- 3) DO NOT use Teflon tape on the threads. These threads are slightly tapered and designed to be self-sealing. The sender uses the threads for its ground connection and sealant may cause a poor ground causing inaccurate readings. If supplemental sealant is needed, we recommend using Loctite C5-A anti-seize. This is a copper based anti-seize which will allow a good electrical connection for the sender ground.
- 4) Install the temperature sender into the intake manifold of your engine if possible. Installing the sender in the engine cylinder head may cause inaccurate temperature readings.
  - a. On GM "LS" engines, the temperature sender mounts on the passenger side of the engine under the rear cylinder. A 12mm thread sender is available to fit this location.
- 5) Connect a wire from the top terminal of the temperature sender to the Dark Green [position 9] of the gauge harness.
- 6) Tighten until snug. DO NOT OVER TIGHTEN!

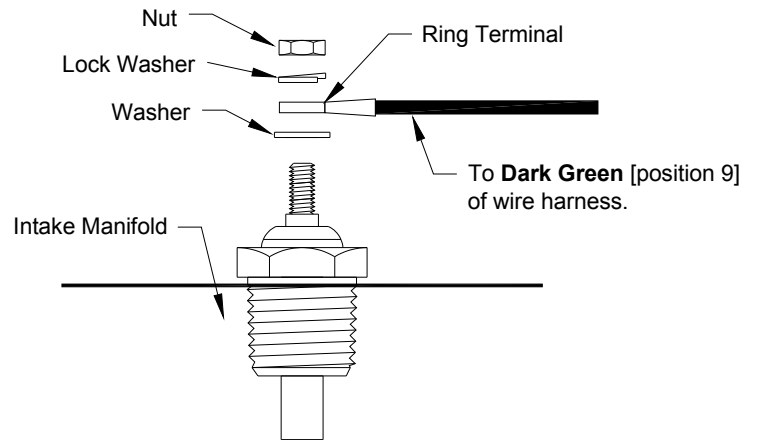

**Notice:** Avoid installing the temperature sender into the head of a late-model GMC engine. Even though the stock GMC sender may have been installed there, this opening is too close to the exhaust header and will most likely cause an improper reading.



# Instrument Panel Wiring Diagram

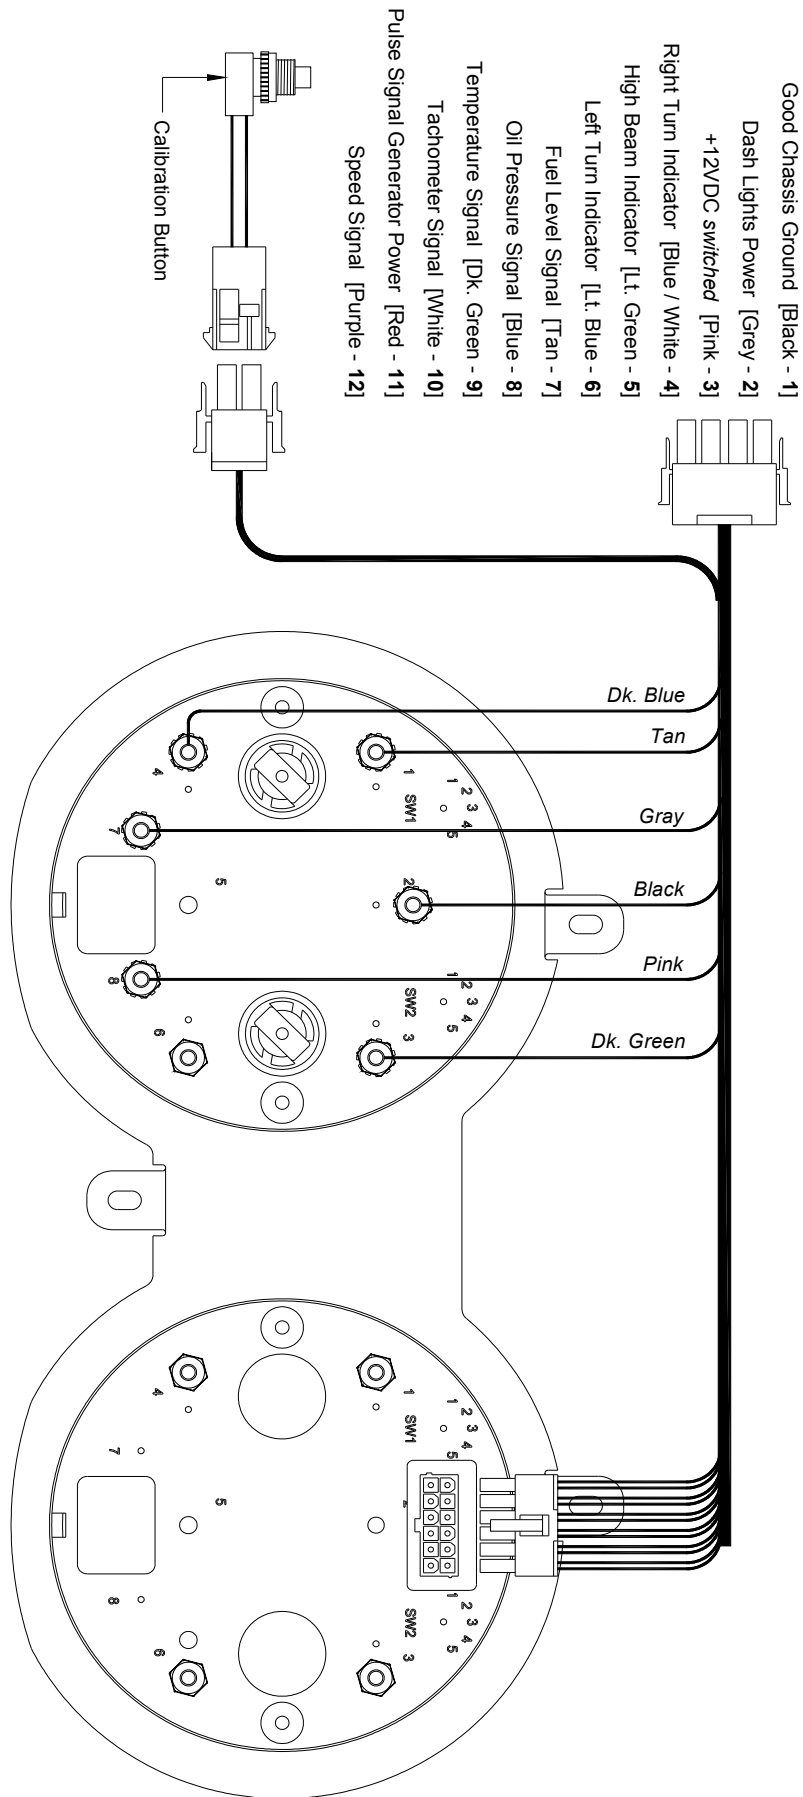

## Speedometer / Tachometer Calibration

| Zeus Technology Calibration Modes |  |
|-----------------------------------|--|
| Tachometer Indication             | Calibration Mode                           |
| 1000 RPM                          | Tachometer Cylinder Setup                  |
| 2000 RPM                          | Tachometer Signal Type Setup               |
| 3000 RPM                          | Speedometer "Instant" Calibration          |
| 4000 RPM                          | Speedometer "Real-time" Calibration        |
| 5000 RPM                          | Speedometer "Measured Mile" Calibration    |
| 6000 RPM                          | Shift Indicator Setup <i>(if equipped)</i> |
| 7000 RPM                          | Factory Defaults Reset Mode                |
| 8000 RPM                          | Exit calibration Mode                      |

### Entering Calibration Mode:

- 1) Start with power to the gauge OFF.
  - 2) Press and HOLD the calibration pushbutton.
  - 3) Start engine.
  - 4) Release the pushbutton after the engine is started. The gauge will indicate 70MPH and 1000RPM. The tenths position of the odometer will be also be lit red to indicate that the gauge is in calibration mode.
- 

### Tachometer Cylinder Setup: *(steps 1-4 may be skipped if the gauge is already in calibration mode)*

- 1) Start with power to the gauge OFF.
- 2) Press and HOLD the calibration pushbutton.
- 3) Start engine.
- 4) Release the pushbutton after the engine is started. The gauge will indicate 70MPH and 1000RPM. The tenths position of the odometer will be also be lit red to indicate that the gauge is in calibration mode.
- 5) If necessary, tap the calibration pushbutton to index the tachometer pointer until the tachometer indicates 1000RPM.
- 6) With the tachometer indicating 1000RPM, press and hold the calibration pushbutton for 6 seconds. The speedometer pointer will move to indicate the current cylinder setting. *(10MPH=1cylinder, 20MPH=2cylinder, 30MPH=3cylinder, 40MPH=4cylinder, 50MPH=5cylinder, 60MPH=6cylinder, 80MPH=8cylinder, 100MPH=10cylinder and 120MPH=12cylinder)*
- 7) Tap the pushbutton to change the cylinder setting. The speedometer will cycle through the available settings each time the pushbutton is tapped.
- 8) With the speedometer indicating the desired cylinder setting, press and hold the pushbutton for 6 seconds. The gauge will indicate 70MPH and 8000RPM. The tenths position of the odometer will be lit green to indicate that the cylinder setting has been programmed.
- 9) If you are finished calibrating the gauge, press and hold the pushbutton while the tachometer is indicating 8000RPM for 6 seconds. This will exit the calibration mode. If you want to calibrate another function of the gauge, tap the pushbutton to index the tachometer to the desired calibration mode.

### Tachometer Signal Type Setup: *(steps 1-4 may be skipped if the gauge is already in calibration mode)*

- 1) Start with power to the gauge OFF.
- 2) Press and HOLD the calibration pushbutton.
- 3) Start engine.
- 4) Release the pushbutton after the engine is started. The gauge will indicate 70MPH and 1000RPM. The tenths position of the odometer will be also be lit red to indicate that the gauge is in calibration mode.
- 5) Tap the calibration pushbutton to index the tachometer pointer until the tachometer indicates 2000RPM.
- 6) With the tachometer indicating 2000RPM, press and hold the calibration pushbutton for 6 seconds. The speedometer pointer will move to indicate the current signal type setting. The tenths position of the odometer will flash green and red.
- 7) Tap the pushbutton to change the signal type setting. The speedometer will cycle between the two options each time the pushbutton is tapped. *(50MPH=5V Signal, 120MPH=12V Signal)*
- 8) Set the signal type to 5V if using a computer generated tachometer signal. Set the signal type to 12V for all other tachometer signals.
- 9) With the speedometer indicating the desired signal type setting, press and hold the pushbutton for 6 seconds. The gauge will indicate 70MPH and 8000RPM. The tenths position of the odometer will be lit green to indicate that the signal type has been programmed.
- 10) If you are finished calibrating the gauge, press and hold the pushbutton while the tachometer is indicating 8000RPM for 6 seconds. This will exit the calibration mode. If you want to calibrate another function of the gauge, tap the pushbutton to index the tachometer to the desired calibration mode.

### Speedometer "Instant" Calibration: *(steps 1-4 may be skipped if the gauge is already in calibration mode)*

- 1) Start with power to the gauge OFF.
- 2) Press and HOLD the calibration pushbutton.
- 3) Start engine.
- 4) Release the pushbutton after the engine is started. The gauge will indicate 70MPH and 1000RPM. The tenths position of the odometer will be also be lit red to indicate that the gauge is in calibration mode.
- 5) Tap the calibration pushbutton to index the tachometer pointer until the tachometer indicates 3000RPM.
- 6) With the tachometer indicating 3000RPM, press and hold the calibration pushbutton for 6 seconds. The speedometer pointer will move to 0MPH.
- 7) Drive the vehicle at exactly 30MPH. Press and hold the pushbutton while traveling 30MPH. When the calibration is completed, the speedometer will move to indicate 30MPH at which point the pushbutton may be released.
- 8) If you are satisfied with the speedometer calibration, tap the pushbutton once to get back into the main gauge calibration mode. The gauge will indicate 70MPH and 8000RPM. If you would like to re-do the calibration, simply press and hold the pushbutton while traveling 30MPH and hold the pushbutton until the speedometer indicates 30MPH at which point the pushbutton may be released.
- 9) When you are finished calibrating the gauge, tap the pushbutton and the gauge will indicate 70MPH and 8000RPM. Then, Press and old the pushbutton for 6 seconds. This will exit the calibration mode. If you want to calibrate another function of the gauge, tap the pushbutton to index the tachometer to the desired calibration mode.

### **Speedometer “Real-Time” Calibration:** *(steps 1-4 may be skipped if the gauge is already in calibration mode)*

- 1) Start with power to the gauge OFF.
- 2) Press and HOLD the calibration pushbutton.
- 3) Start engine.
- 4) Release the pushbutton after the engine is started. The gauge will indicate 70MPH and 1000RPM. The tenths position of the odometer will be also be lit red to indicate that the gauge is in calibration mode.
- 5) Tap the calibration pushbutton to index the tachometer pointer until the tachometer indicates 4000RPM.
- 6) With the tachometer indicating 4000RPM, press and hold the calibration pushbutton for 6 seconds. The speedometer pointer will move to indicate the speed with the current calibration (which you will need to adjust to make correct).
- 7) Press and hold the pushbutton to increase the indicated speed. Release the pushbutton to stop increasing the speed.
- 8) If necessary, press and hold the pushbutton again to decrease the indicated speed. Release the pushbutton to stop decreasing.
- 9) Press and hold the pushbutton once more to increase the indicated speed. Etc...
- 10) Once the correct speed is dialed in on the speedometer, wait 10 seconds and then tap the pushbutton. The gauge will indicate 70MPH and 8000RPM.
- 11) If you are finished calibrating the gauge, press and hold the pushbutton while the tachometer is indicating 8000RPM for 6 seconds. This will exit the calibration mode. If you want to calibrate another function of the gauge, tap the pushbutton to index the tachometer to the desired calibration mode.

### **Speedometer “Measured Mile” Calibration:** *(steps 1-4 may be skipped if the gauge is already in calibration mode)*

- 1) Start with power to the gauge OFF.
- 2) Press and HOLD the calibration pushbutton.
- 3) Start engine.
- 4) Release the pushbutton after the engine is started. The gauge will indicate 70MPH and 1000RPM. The tenths position of the odometer will be also be lit red to indicate that the gauge is in calibration mode.
- 5) Tap the calibration pushbutton to index the tachometer pointer until the tachometer indicates 5000RPM.
- 6) With the tachometer indicating 5000RPM, press and hold the pushbutton for 6 seconds. The speedometer pointer will move to 30MPH.
- 7) Begin driving a measured mile. While driving, the tenths position of the odometer will be lit with a flashing green light to indicate a good speed signal.
- 8) At the end of your measured mile, press and hold the pushbutton for another 6 seconds. The gauge will indicate 70MPH and 8000RPM.
- 9) If you are finished calibrating the gauge, press and hold the pushbutton while the tachometer is indicating 8000RPM for 6 seconds. This will exit the calibration mode. If you want to calibrate another function of the gauge, tap the pushbutton to index the tachometer to the desired calibration mode.

### **Optional Shift Indicator Setup:** *(steps 1-4 may be skipped if the gauge is already in calibration mode)*

- 1) Start with power to the gauge OFF.
- 2) Press and HOLD the calibration pushbutton.
- 3) Start engine.
- 4) Release the pushbutton after the engine is started. The gauge will indicate 70MPH and 1000RPM. The tenths position of the odometer will be also be lit red to indicate that the gauge is in calibration mode.
- 5) Tap the calibration pushbutton to index the tachometer pointer until the tachometer indicates 6000RPM.
- 6) With the tachometer indicating 6000RPM, press and hold the pushbutton for 6 seconds. The tachometer pointer will move to 0RPM. The shift light trigger RPM can now be set.
- 7) Press and hold the pushbutton to increase the tachometer reading. Release the pushbutton to stop increasing the tachometer reading.
- 8) If necessary, push and hold the pushbutton again to decrease the tachometer reading. Release the pushbutton to stop decreasing the tachometer reading.
- 9) Press and hold the pushbutton once more to increase the tachometer reading. Etc...
- 10) When the desired shift light trigger RPM is indicated on the tachometer, release the pushbutton and wait 10 seconds. After 10 seconds of no pushbutton activity, the trigger point will be stored and the tachometer will indicate 8000RPM.
- 11) If you are finished calibrating the gauge, press and hold the pushbutton while the tachometer is indicating 8000RPM for 6 seconds. This will exit the calibration mode. If you want to calibrate another function of the gauge, tap the pushbutton to index the tachometer to the desired calibration mode.

### **Reset Gauge Calibration to Factory Defaults:** *(steps 1-4 may be skipped if the gauge is already in calibration mode)*

- 1) Start with power to the gauge OFF.
- 2) Press and HOLD the calibration pushbutton.
- 3) Start engine.
- 4) Release the pushbutton after the engine is started. The gauge will indicate 70MPH and 1000RPM. The tenths position of the odometer will be also be lit red to indicate that the gauge is in calibration mode.
- 5) Tap the calibration pushbutton to index the tachometer pointer until the tachometer indicates 7000RPM.
- 6) With the tachometer indicating 7000RPM, press and hold the pushbutton for 6 seconds. The tachometer will move to 8000RPM and the tenths position of the odometer will be lit green to indicate the gauge has been restored to the factory default settings.
- 7) If you are finished calibrating the gauge, press and hold the pushbutton while the tachometer is indicating 8000RPM for 6 seconds. This will exit the calibration mode. If you want to calibrate another function of the gauge, tap the pushbutton to index the tachometer to the desired calibration mode.