


# Sky Fence

## Wiring:

- **RED** = Battery Power (constant +12V)
- **BLACK** = Good Chassis Ground
- **ORANGE** = Sky Fence Arm / Disarm Input
  - Apply +12V to disarm
  - Disconnect to arm
- **GREEN** = Sky Fence Tripped Output
  - Has +12V when Sky Fence is NOT tripped.
  - No voltage when Sky Fence IS tripped.
- **WHITE** = Speed Signal For Speedometer

## Example Application:

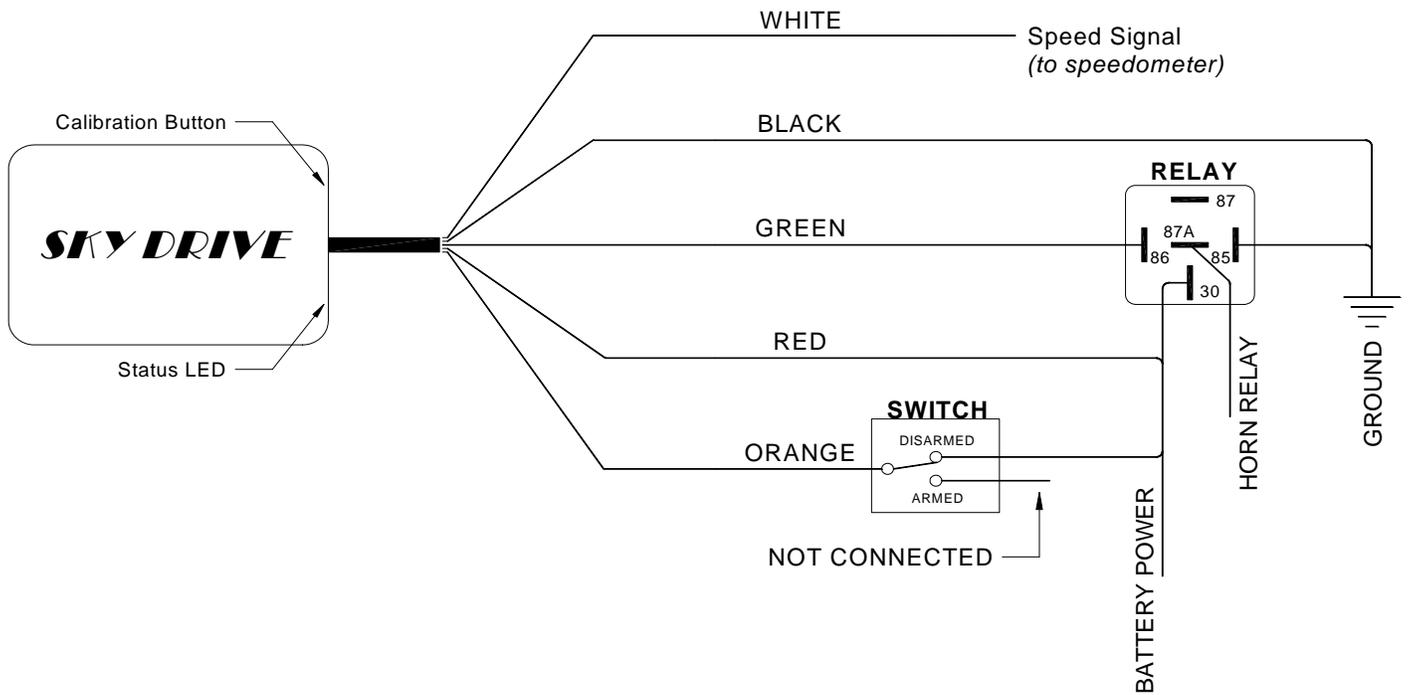

Recommended Relay: Bosch # 0 332 209 137

Relay Terminal #	Function
85	GROUND
86	+12V
87	NO*
87A	NC**
30	COM

\* Normally Open

\*\* Normally Closed